




PUMP SERVICE BOOK





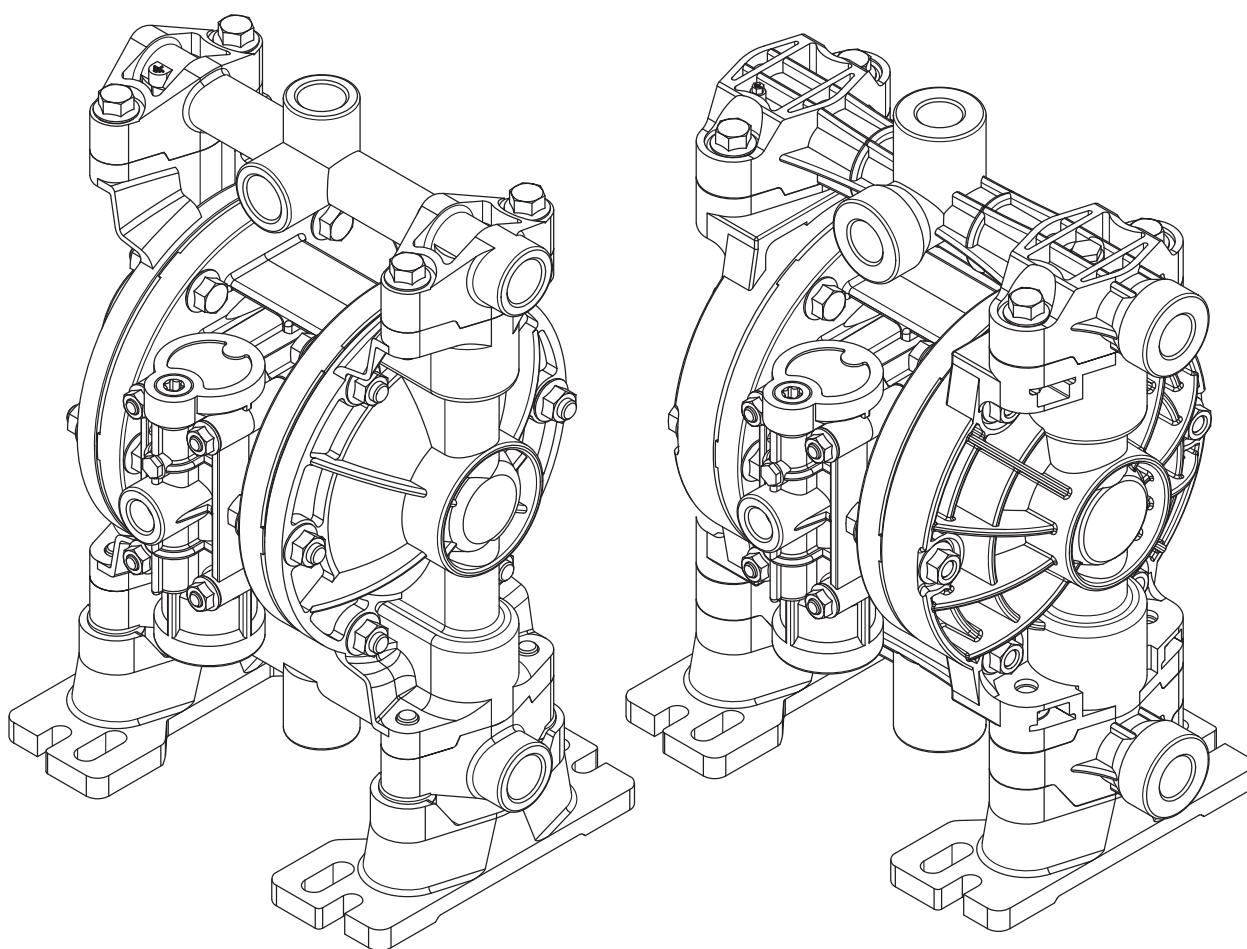


TC-X152A TC-X152S TC-X152P-PP TC-X152V TC-X152D

Series Pumps








1-① AC AN AT AH AS
SC SN ST SH SS

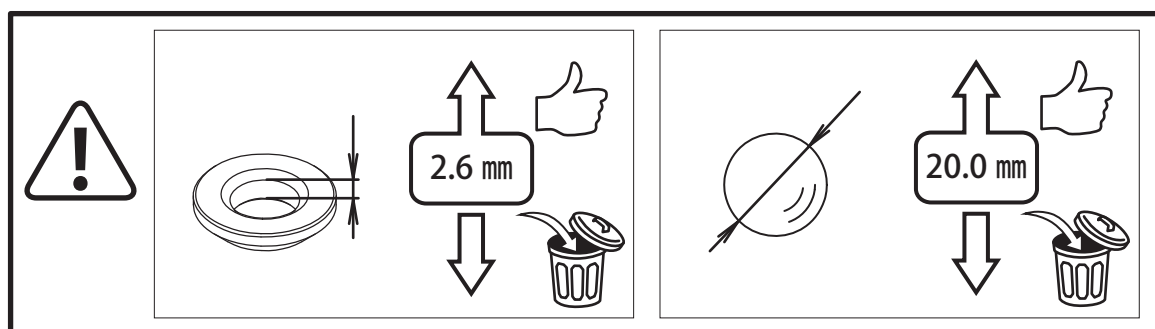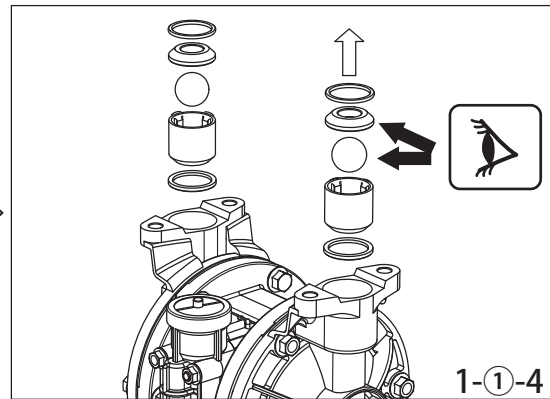
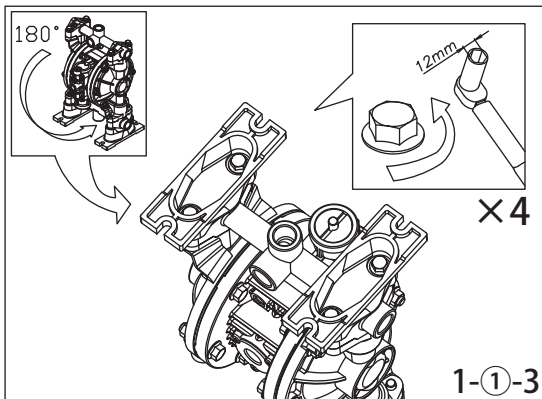
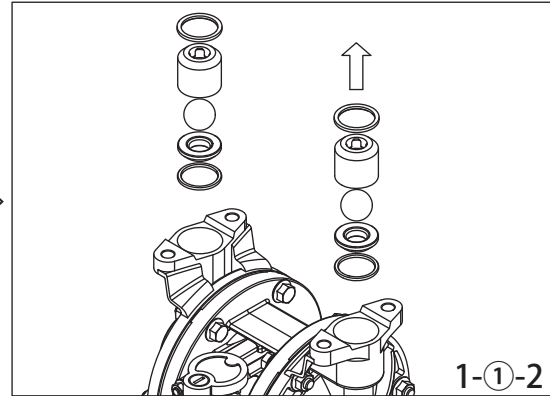
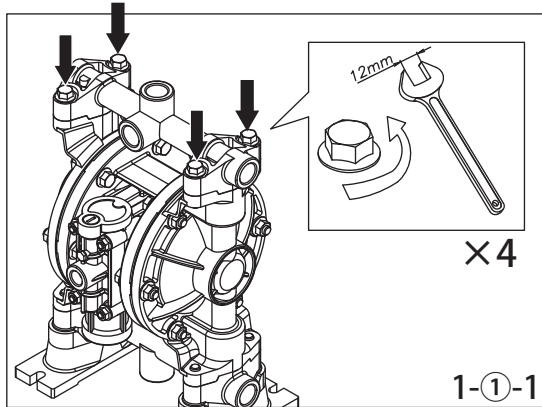


1





1-② PC PN PT PH PS
VT VS DT

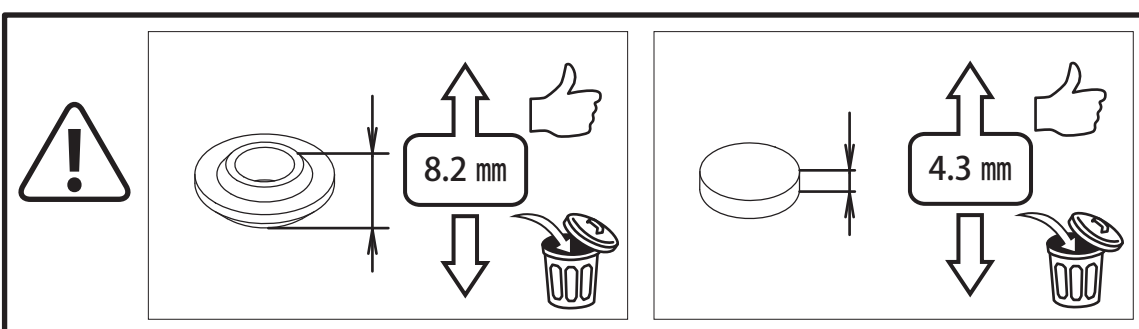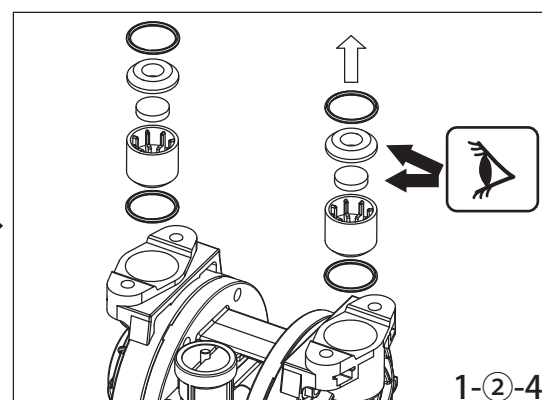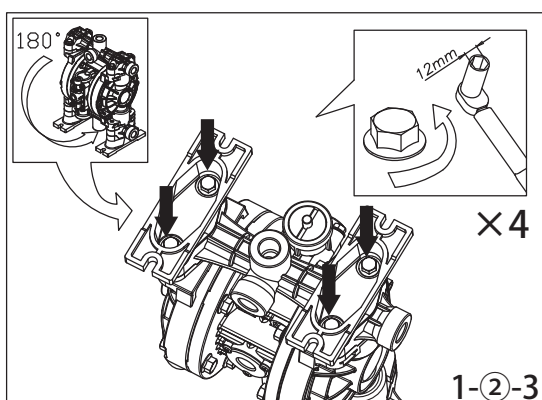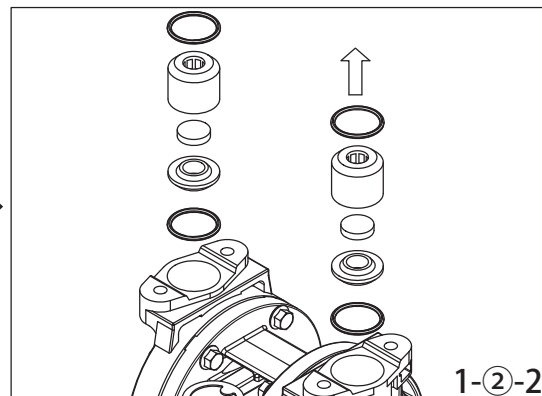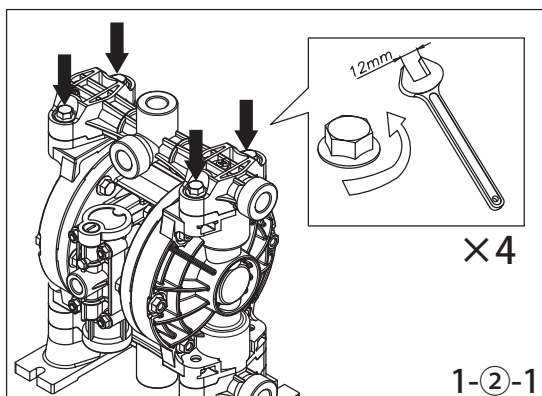

2-① AC AN AT AH AS
SC SN ST SH SS

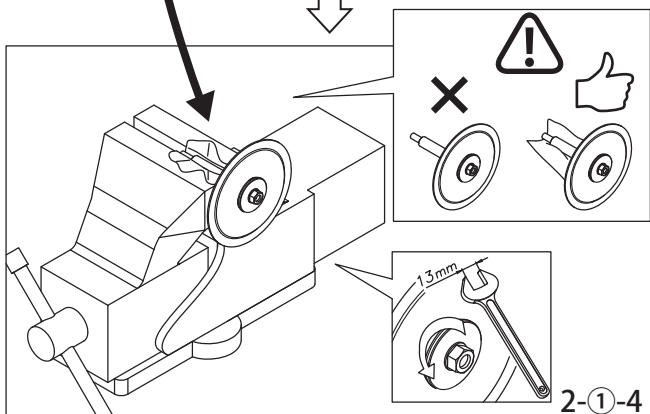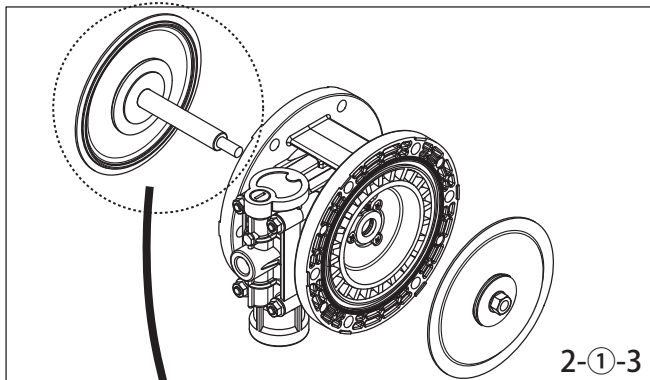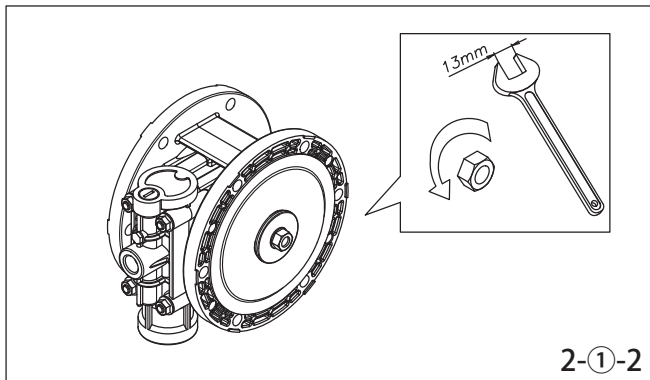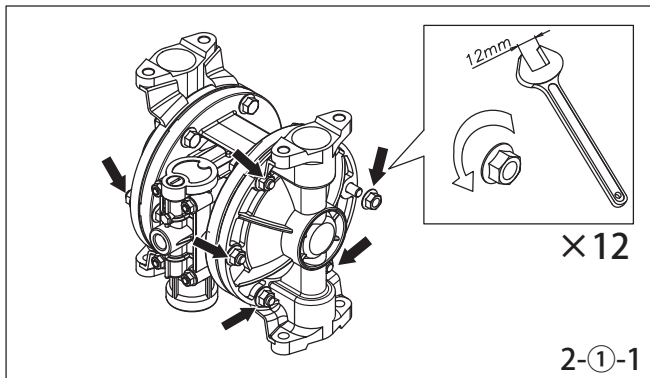


2-② PC PN PT PH PS
VT VS DT

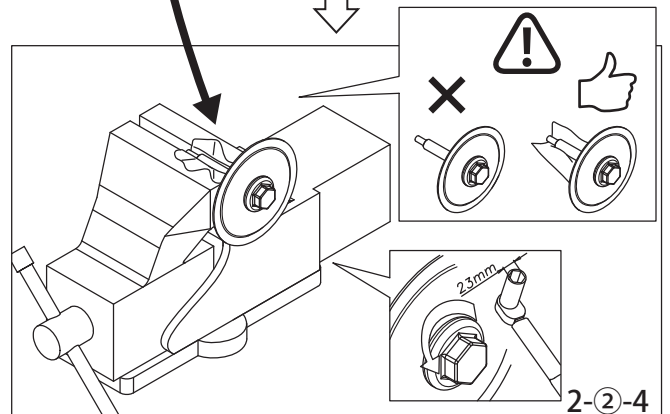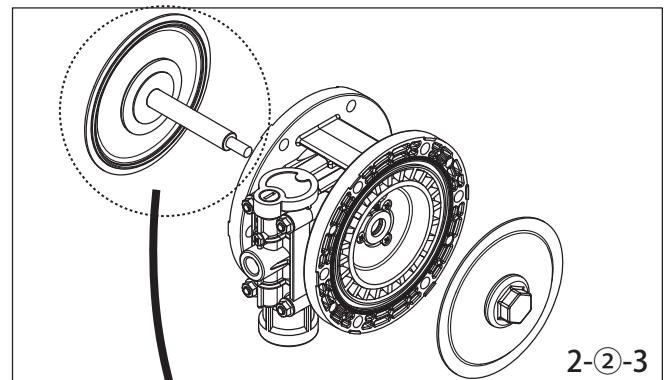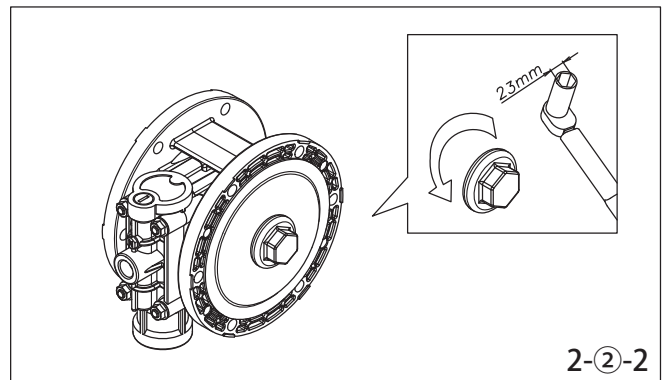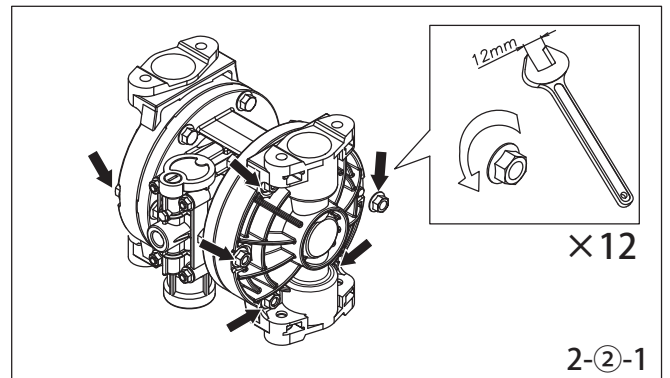

3




3-①

AC	SC
AN	SN
AH	SH
AS	SS

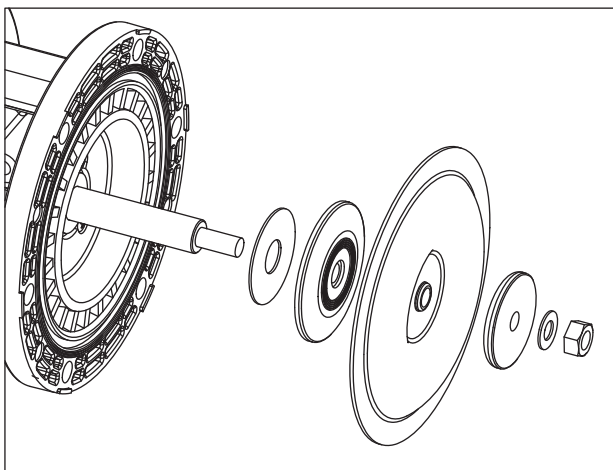


3-②

AT	ST
----	----

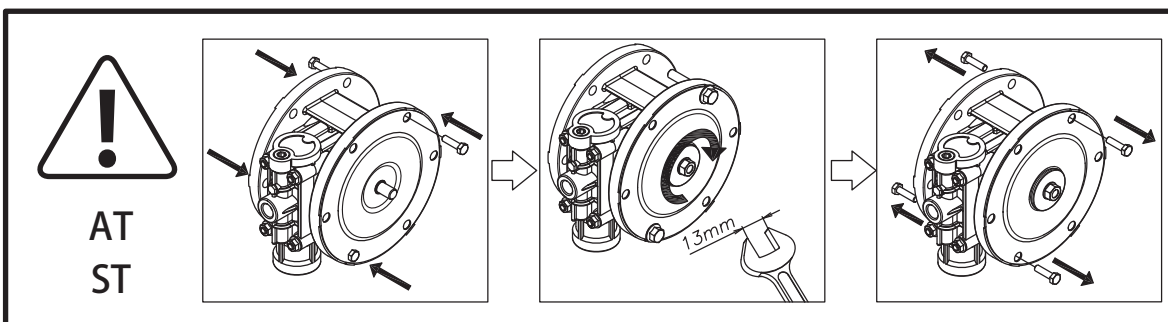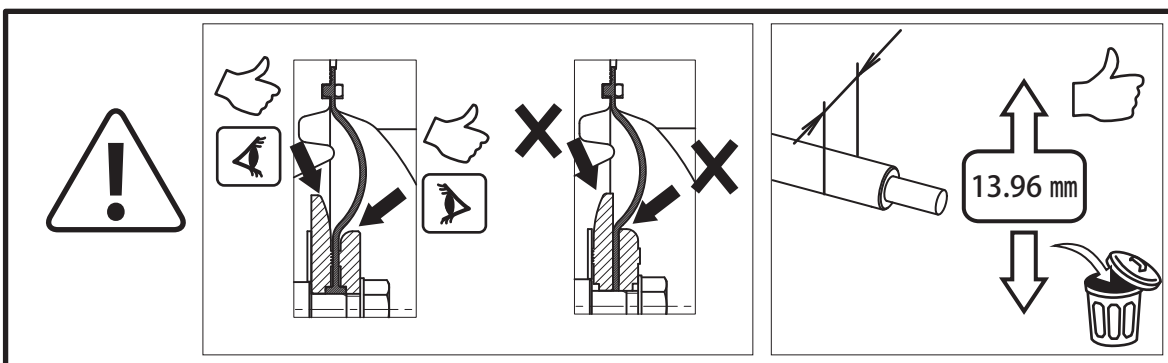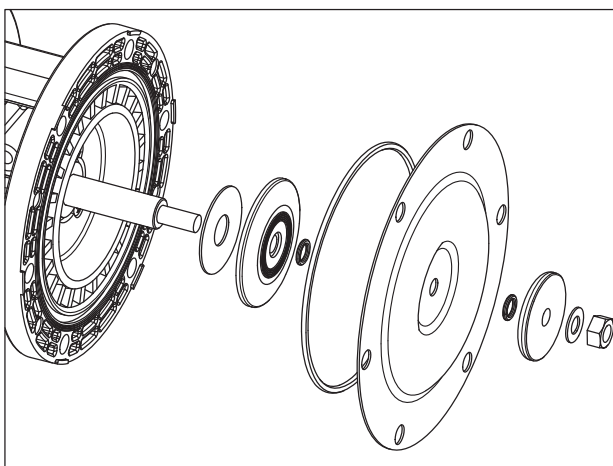




3-③

PC VS
PN
PH
PS



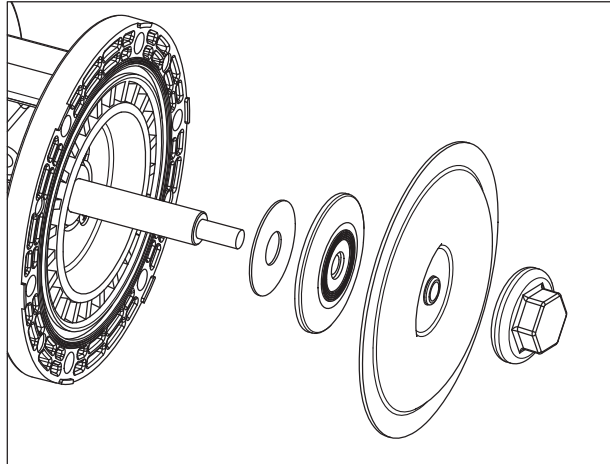




3-④

PT VT
DT

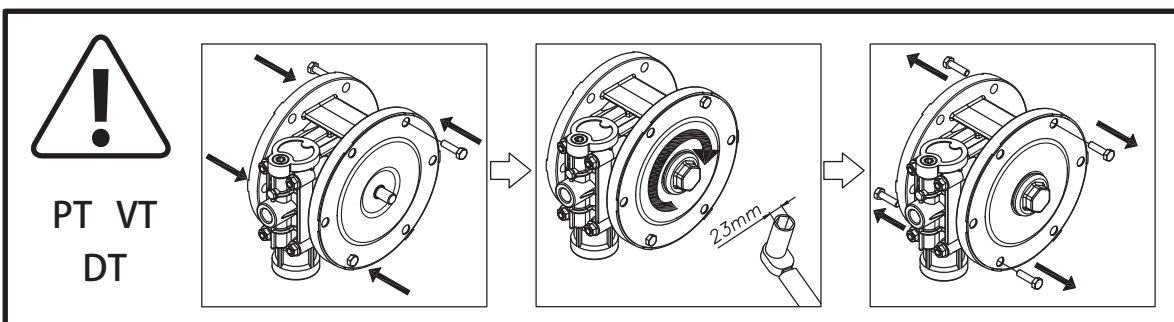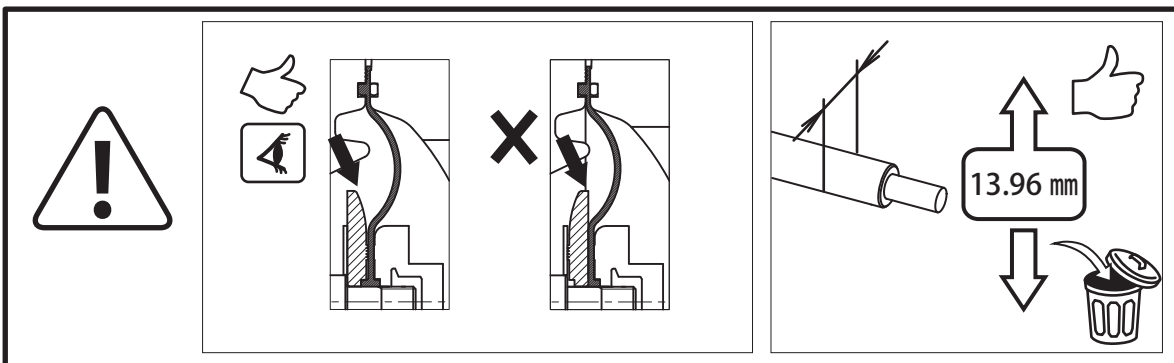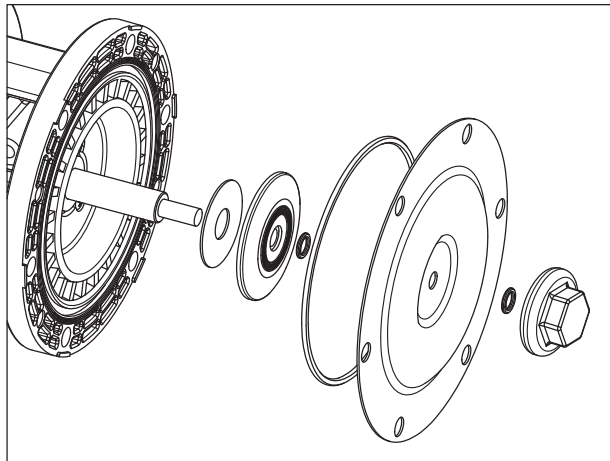



4

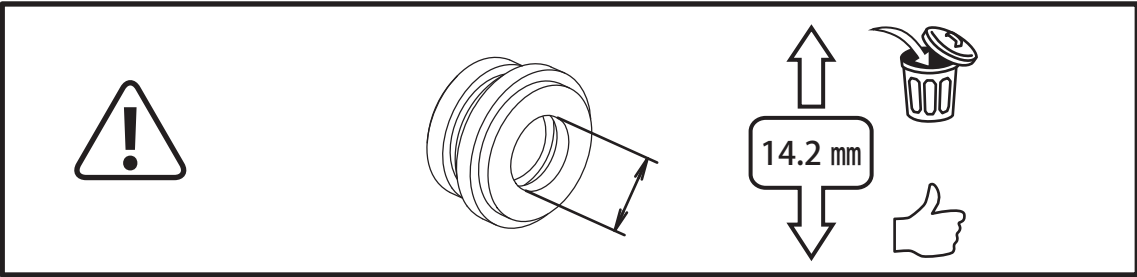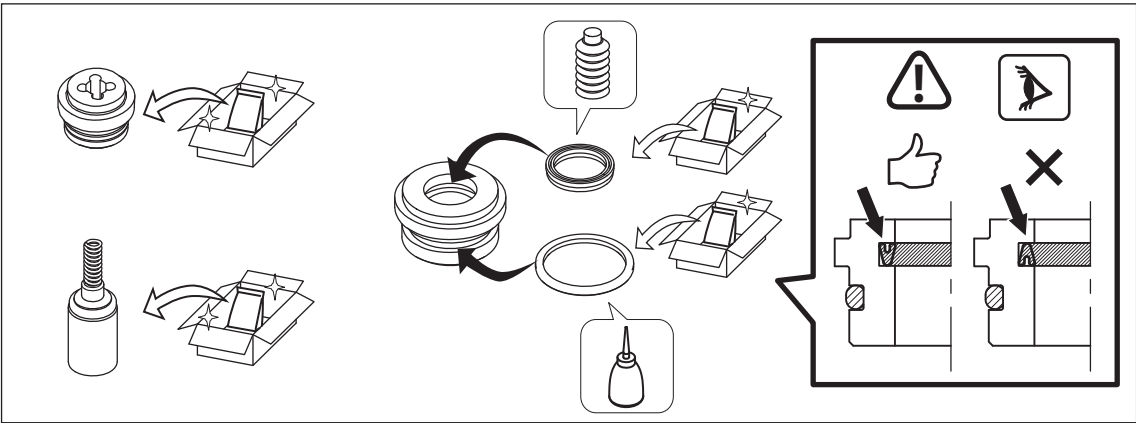
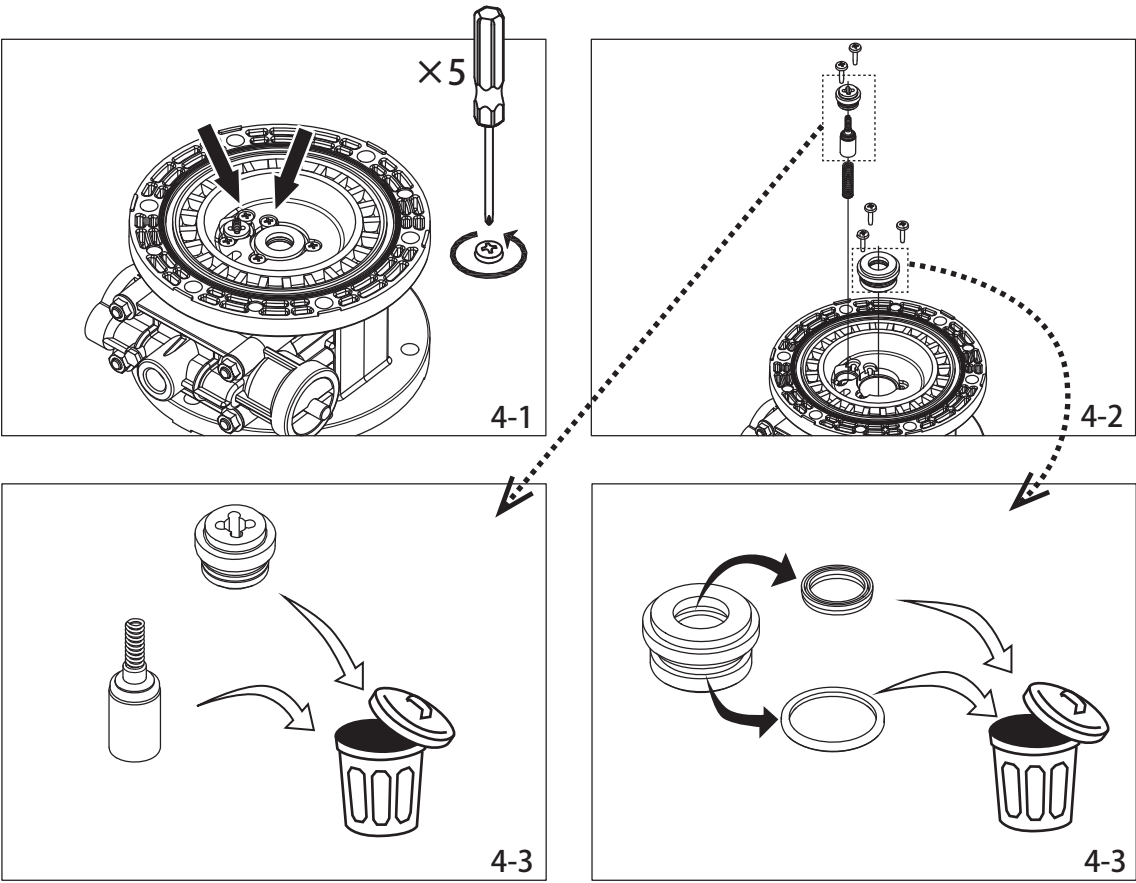


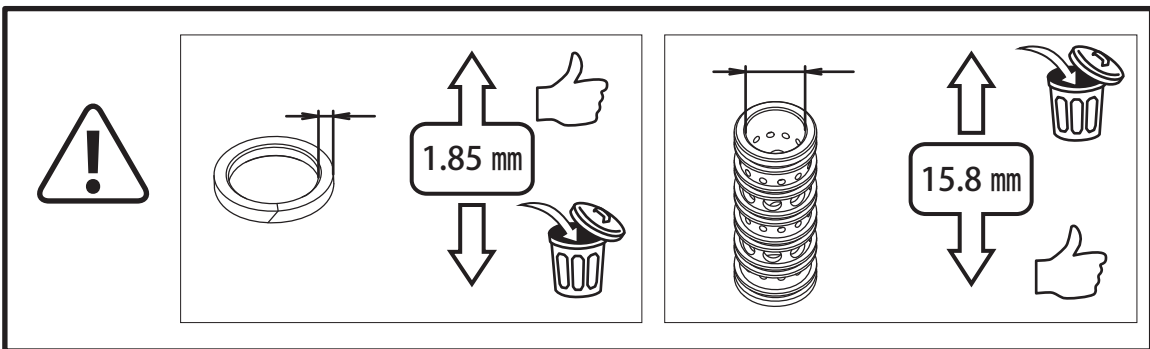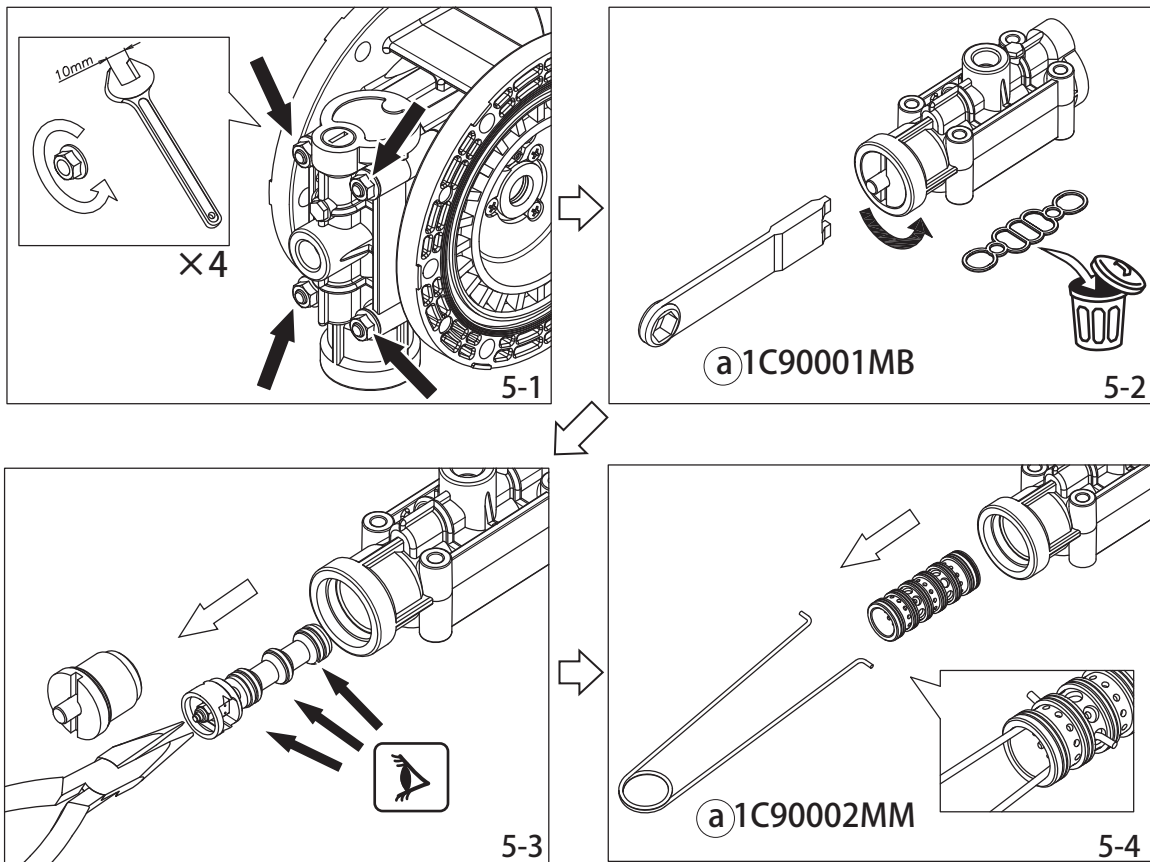

6

6-1

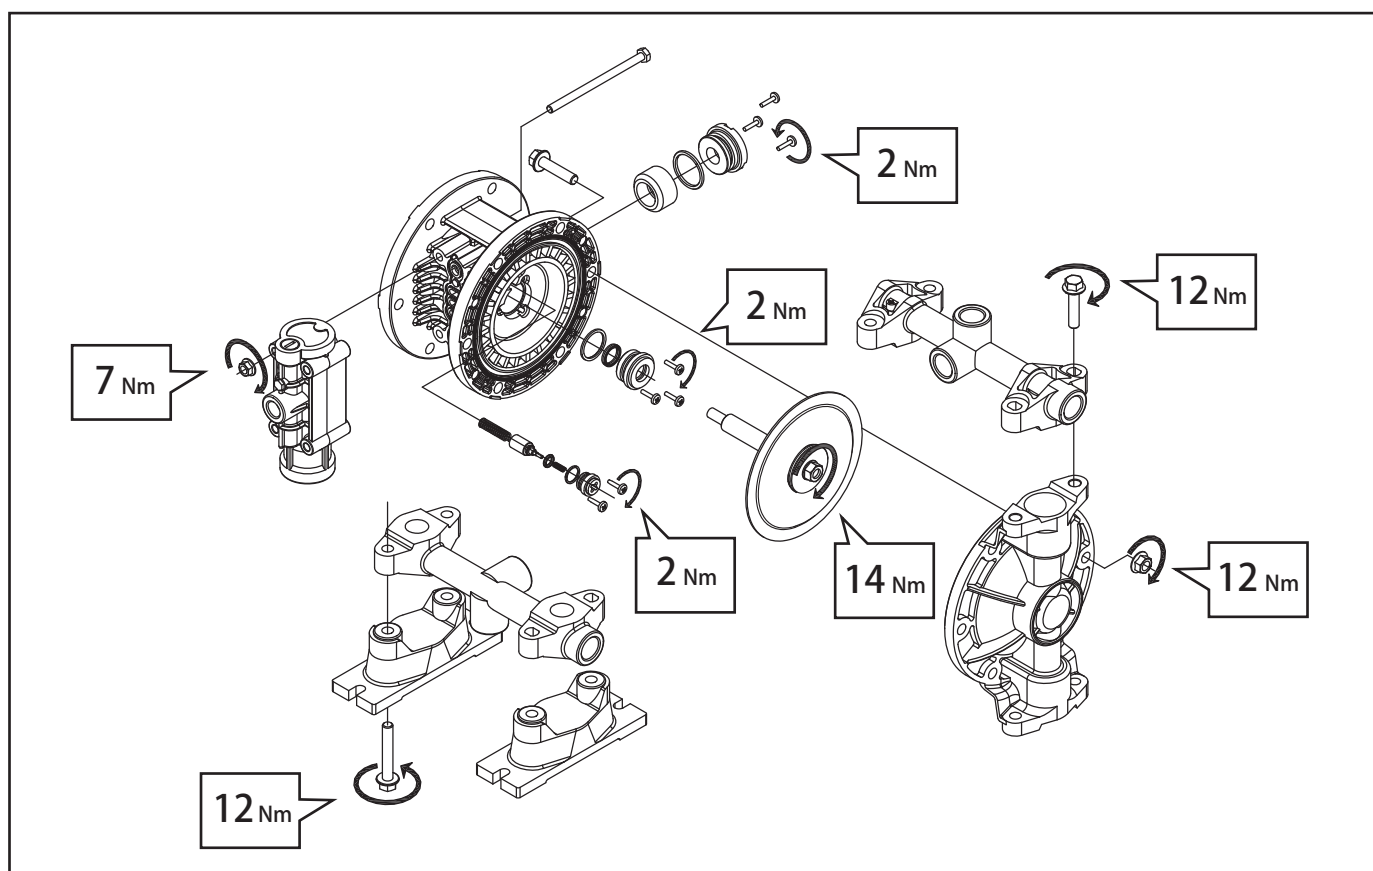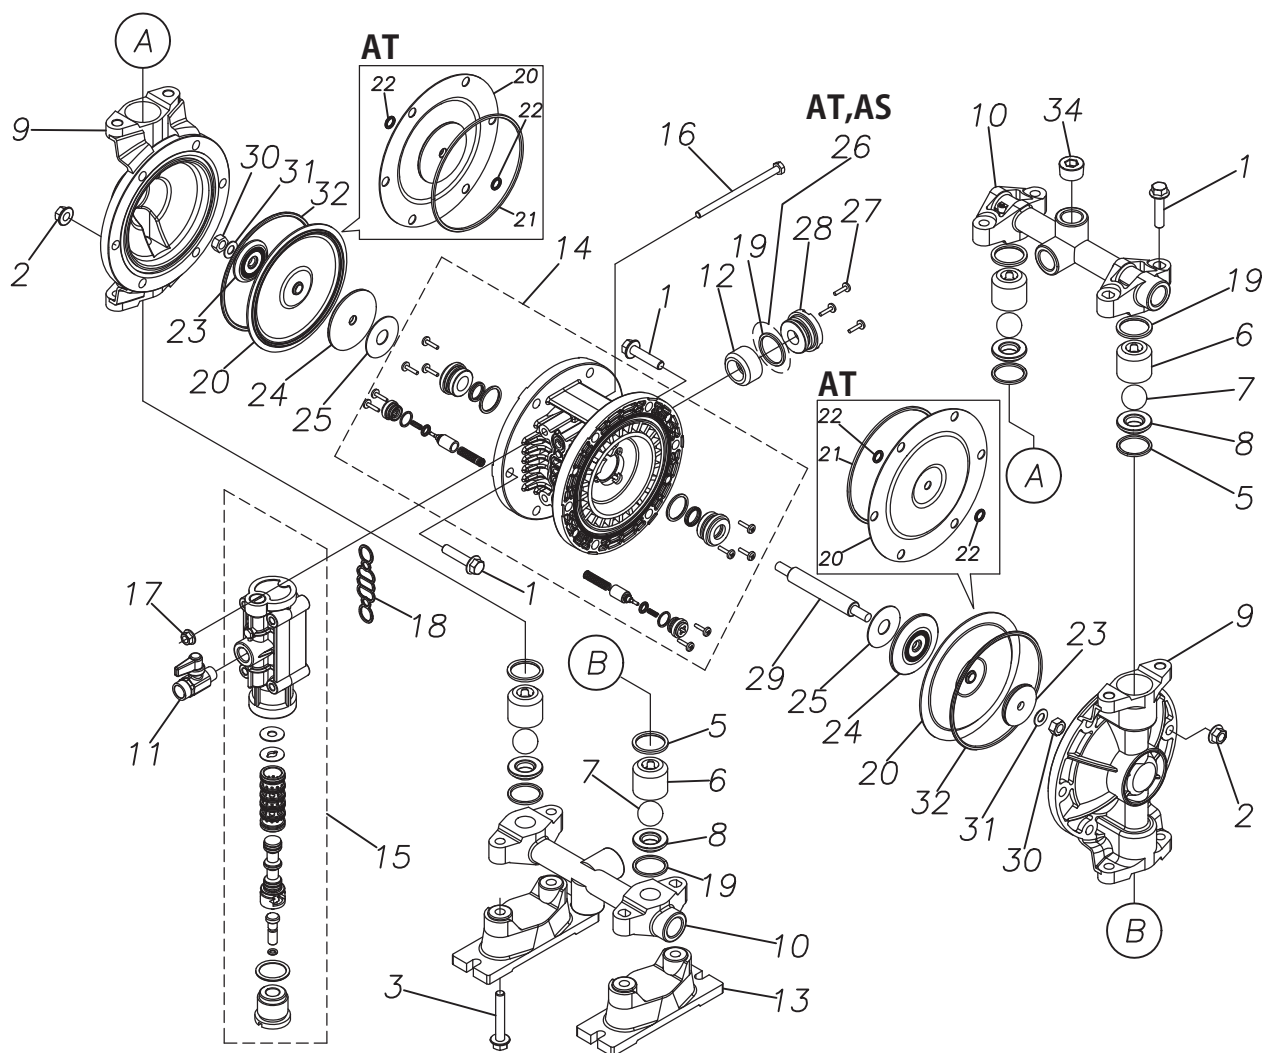

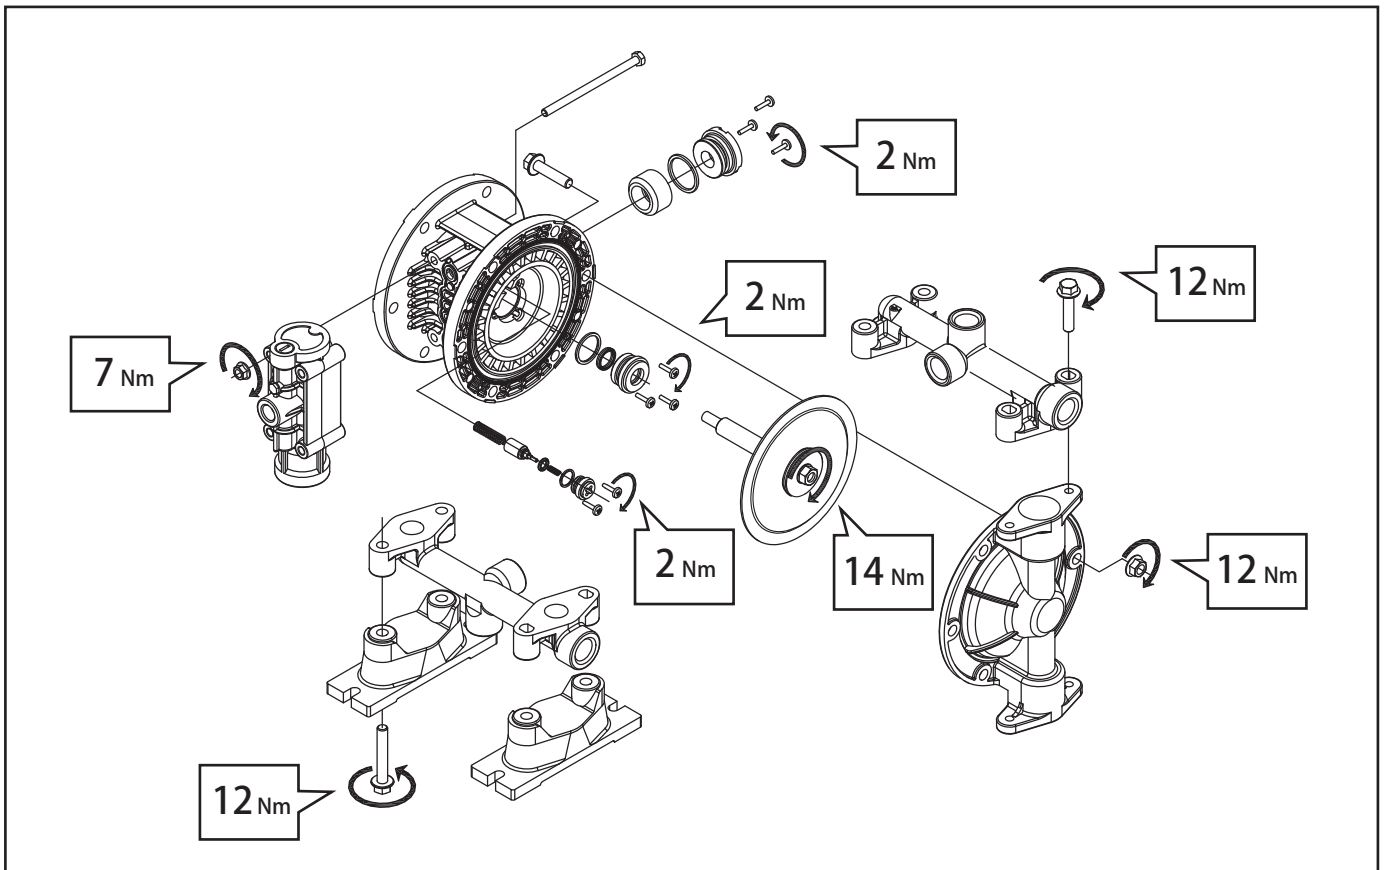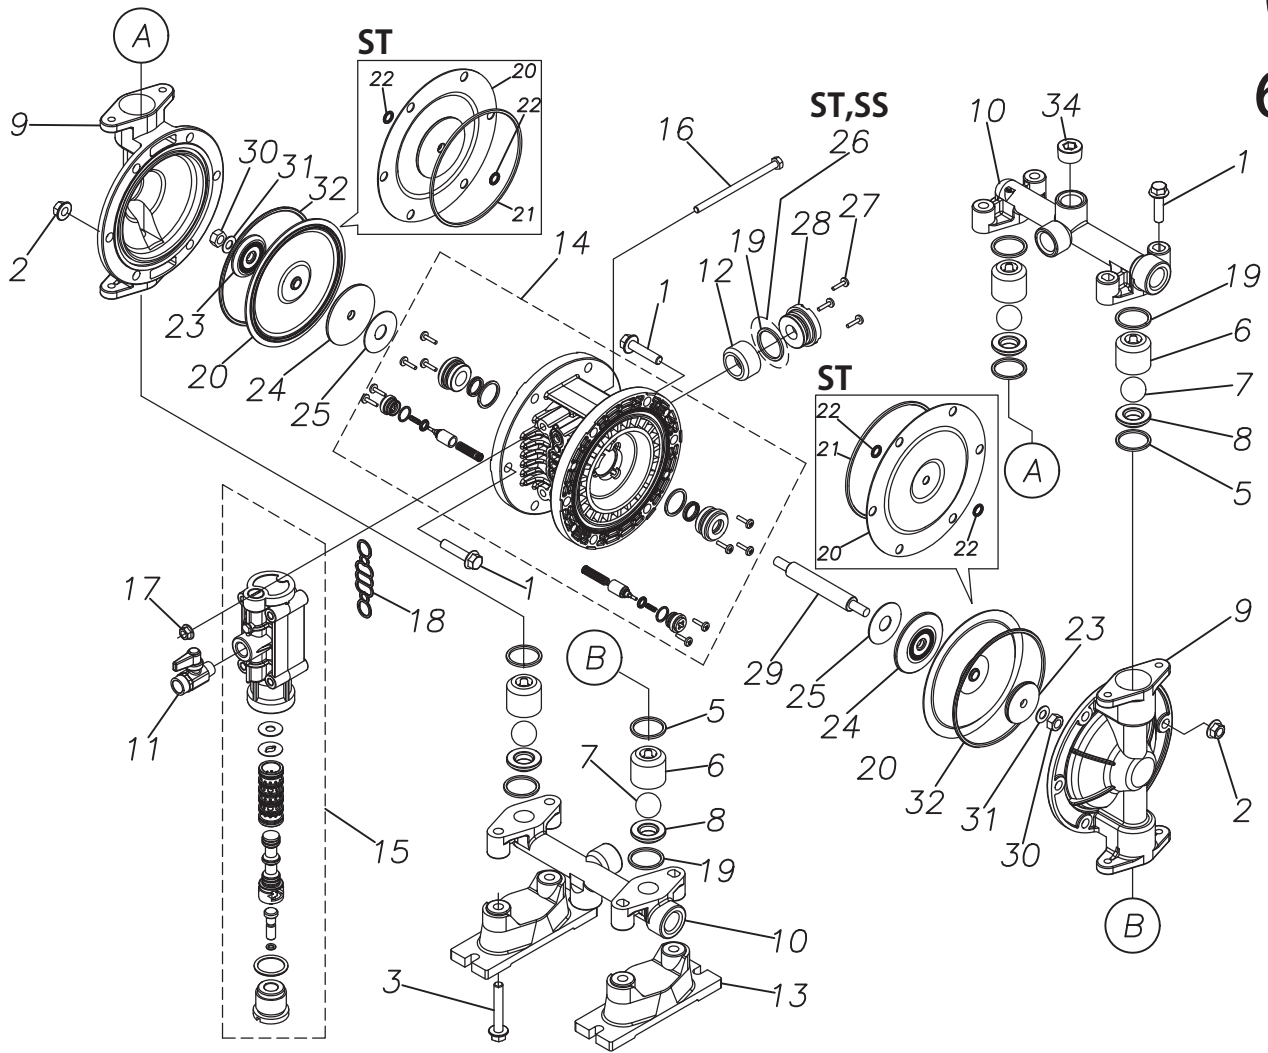

6

6-3

