


PUMP SERVICE BOOK



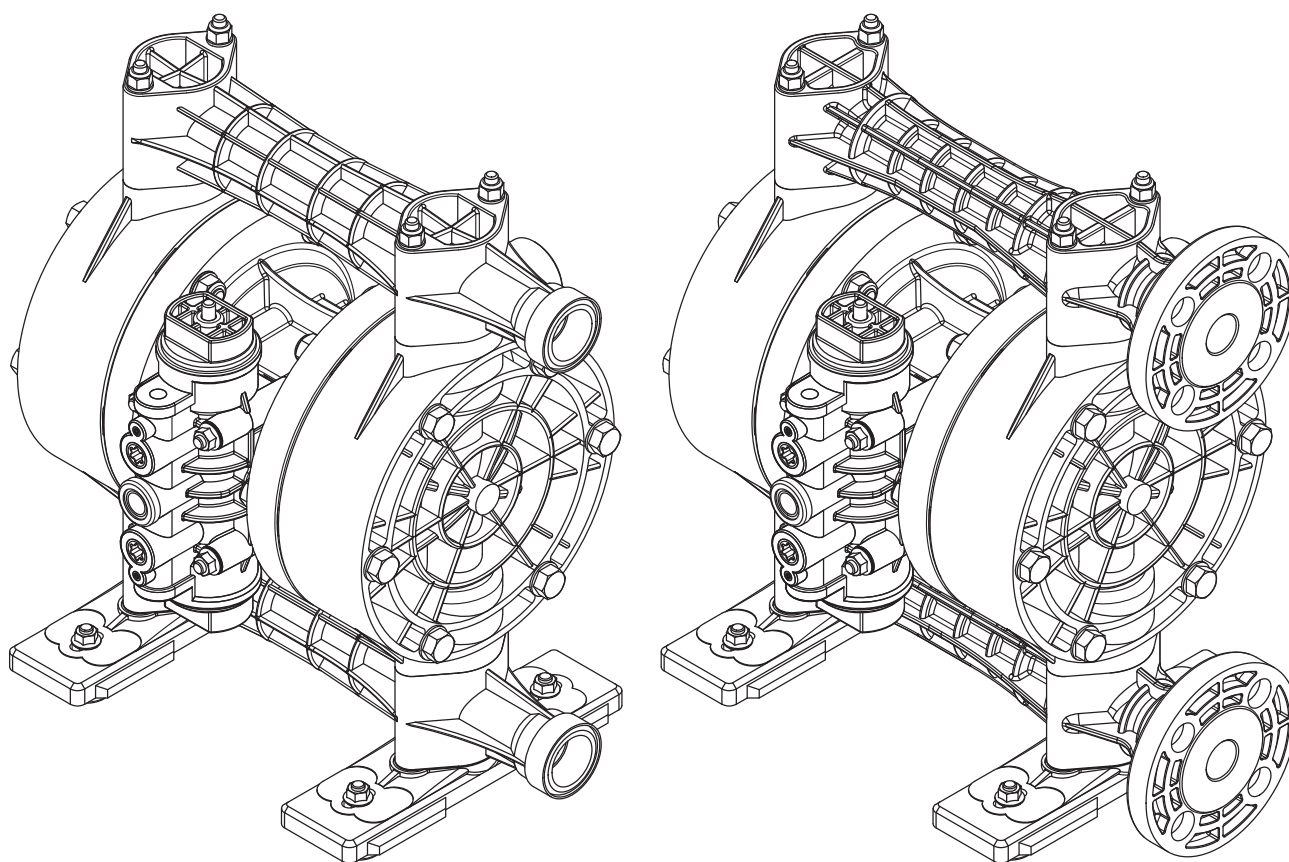


TC-X202P TC-X252P TC-X252V

Series Pumps












1-① (202) PC PN PE PV PH PS PT PHT

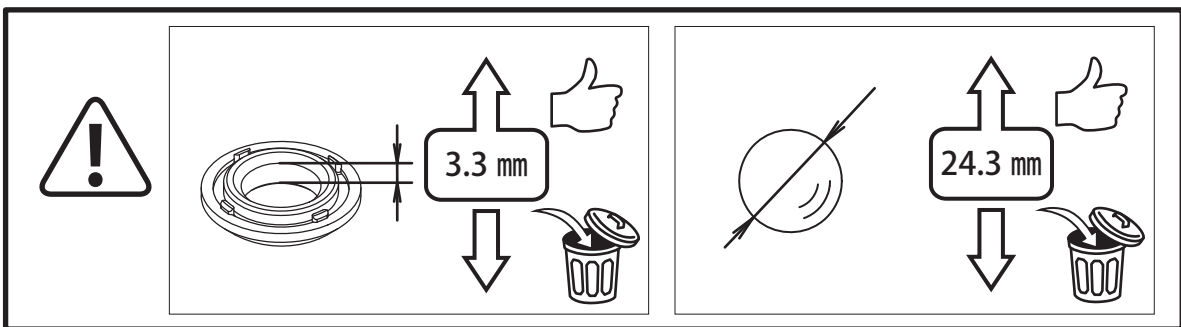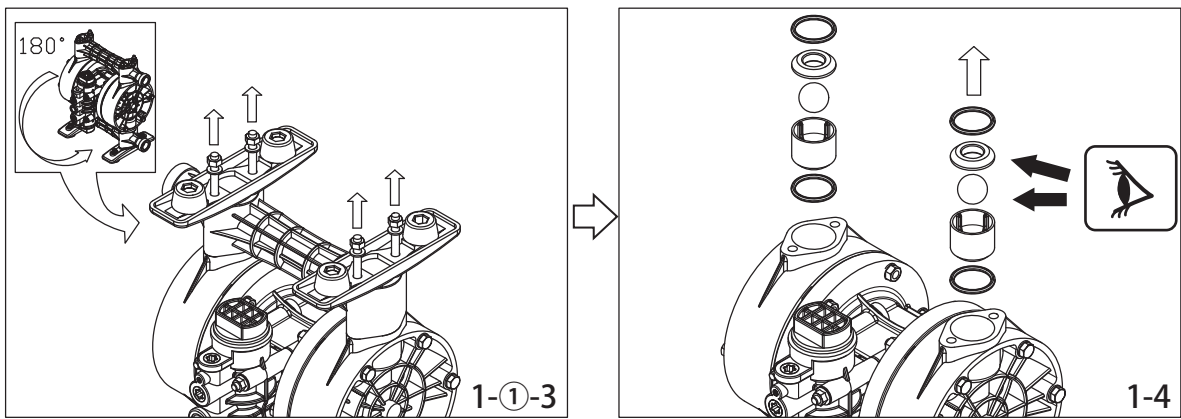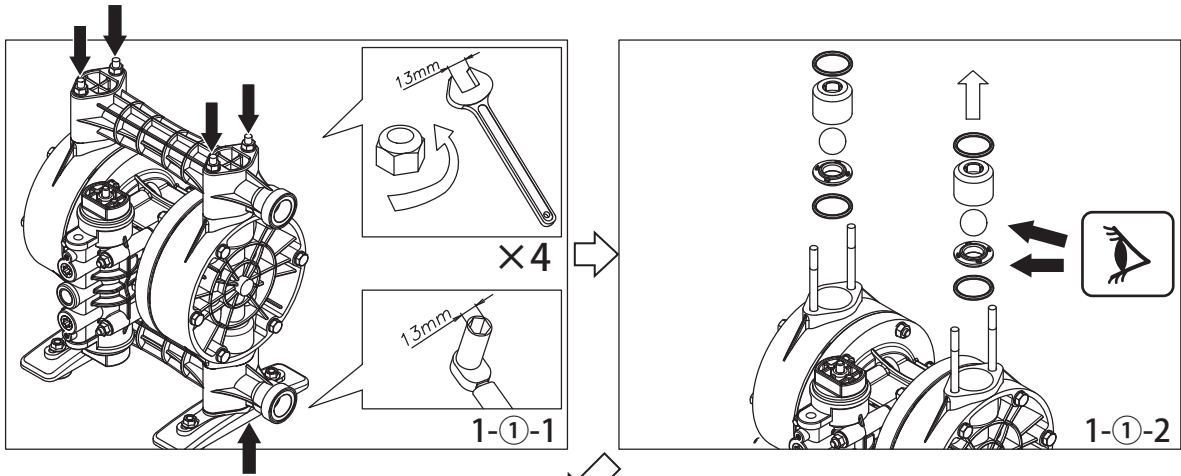

1

1-② (252) PN PB PE PV PH PS PT PHT
VE VV VT VH VS

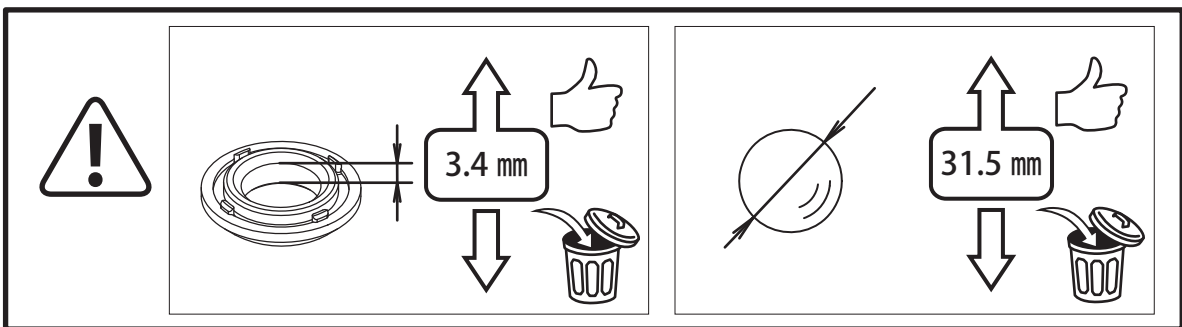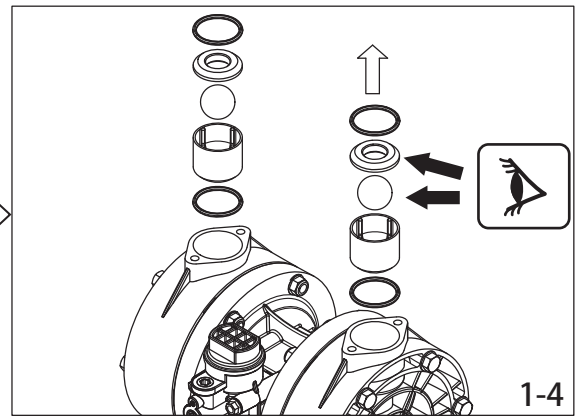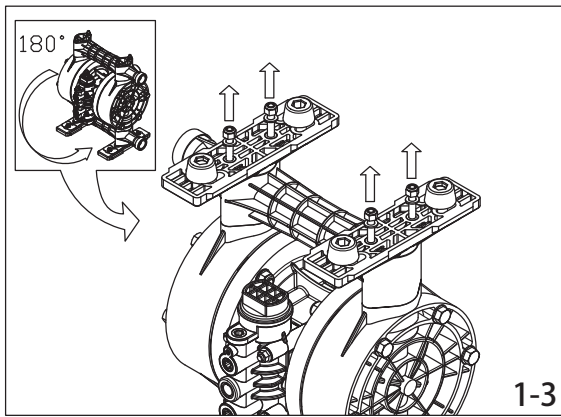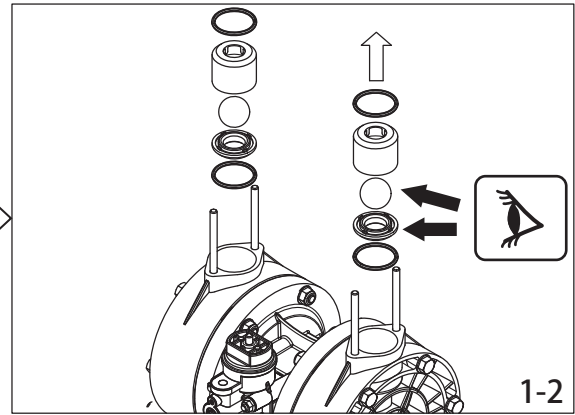
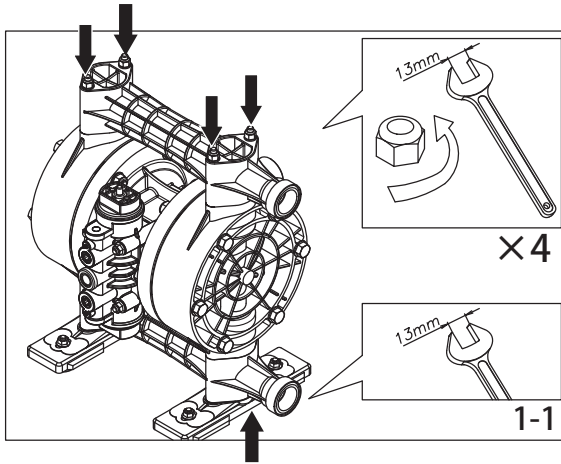


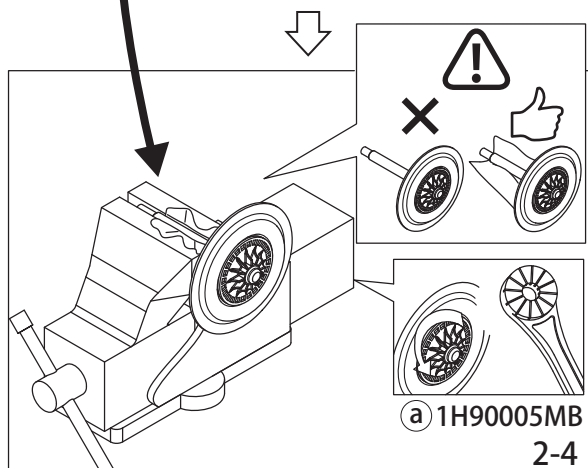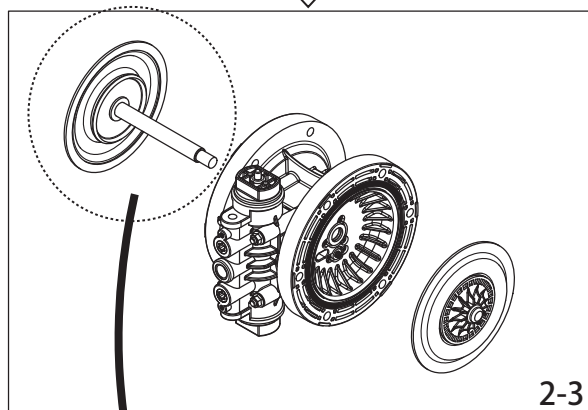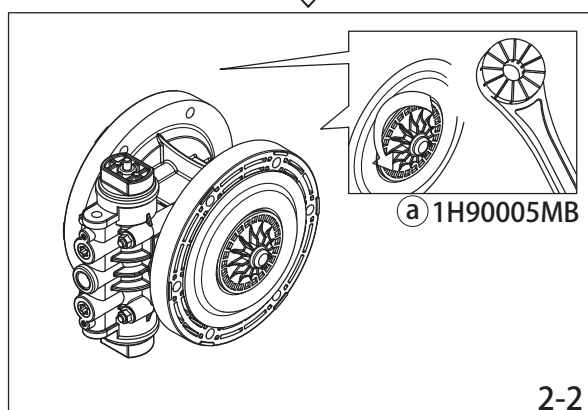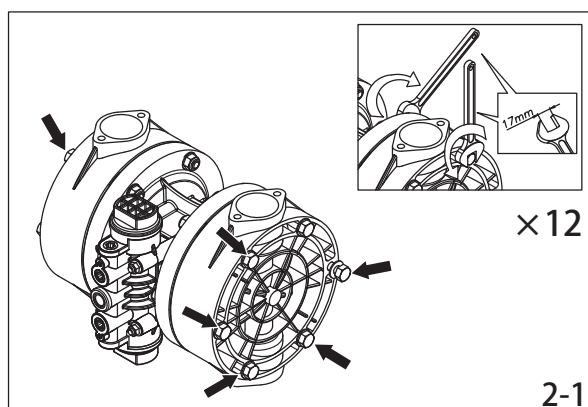

3


3-①

PC VE
PN VV
PE
PV

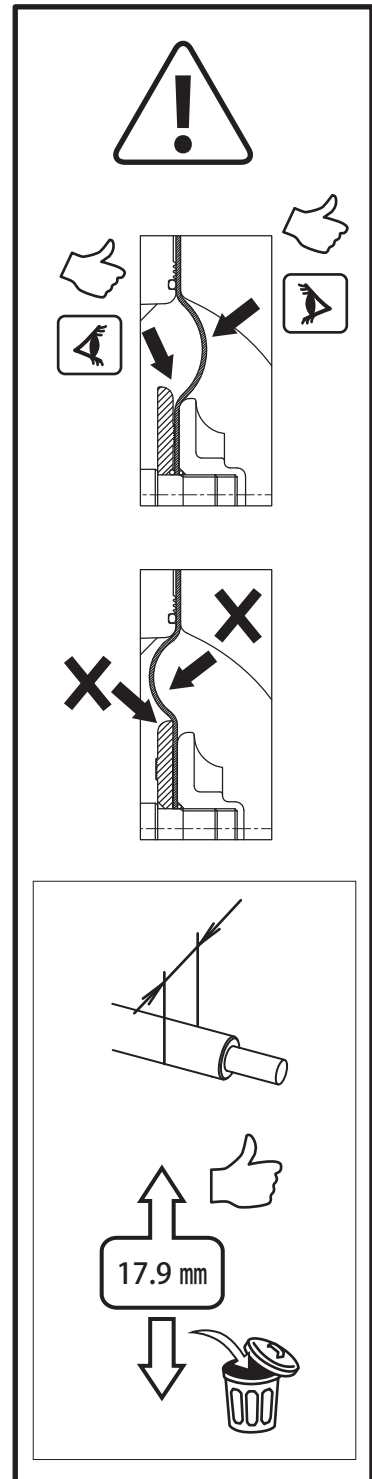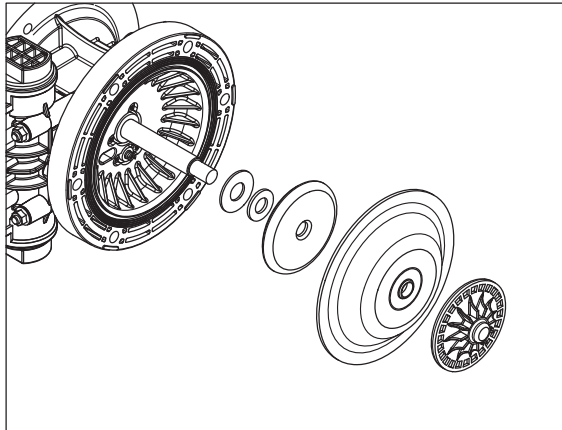



3-②







PH VH
PS VS
PHT

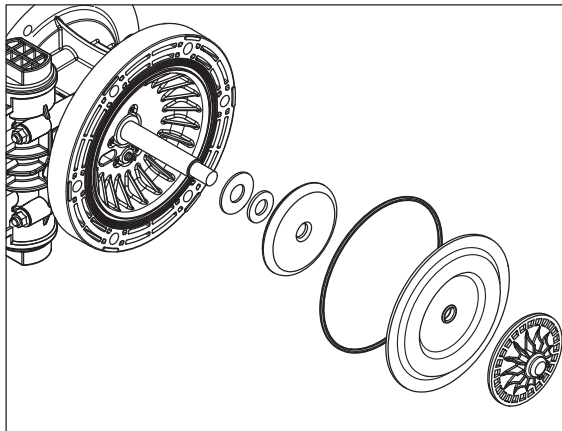






3-③



PT VT

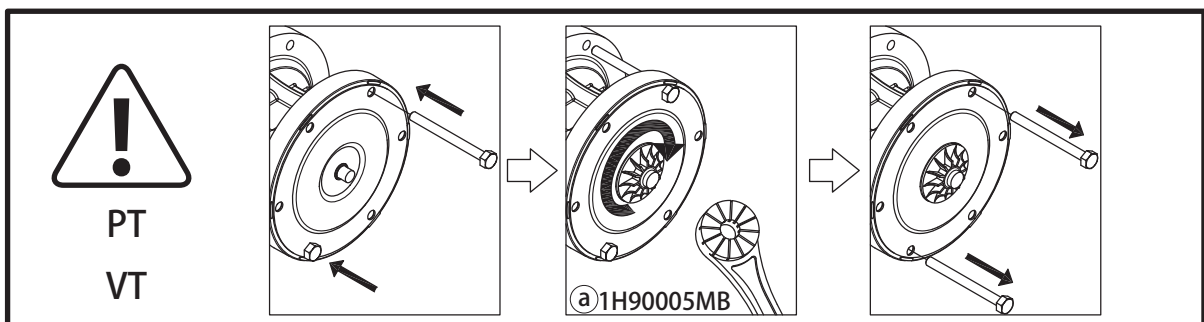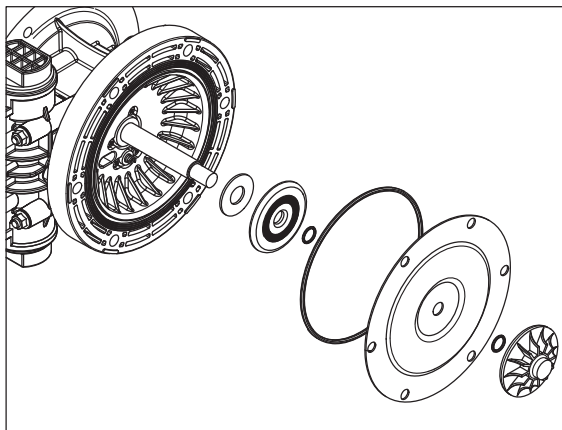

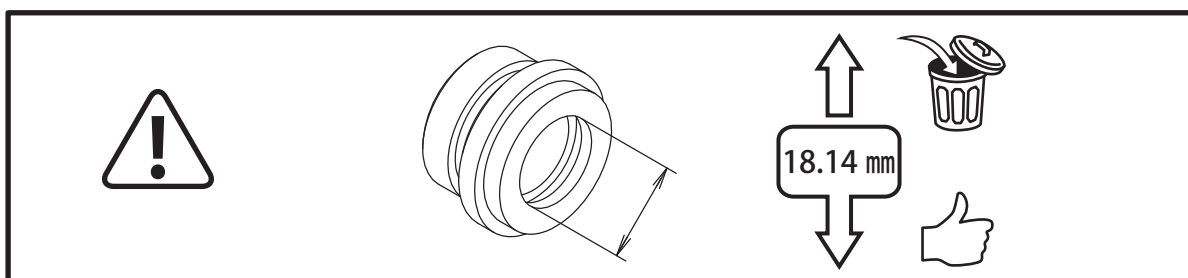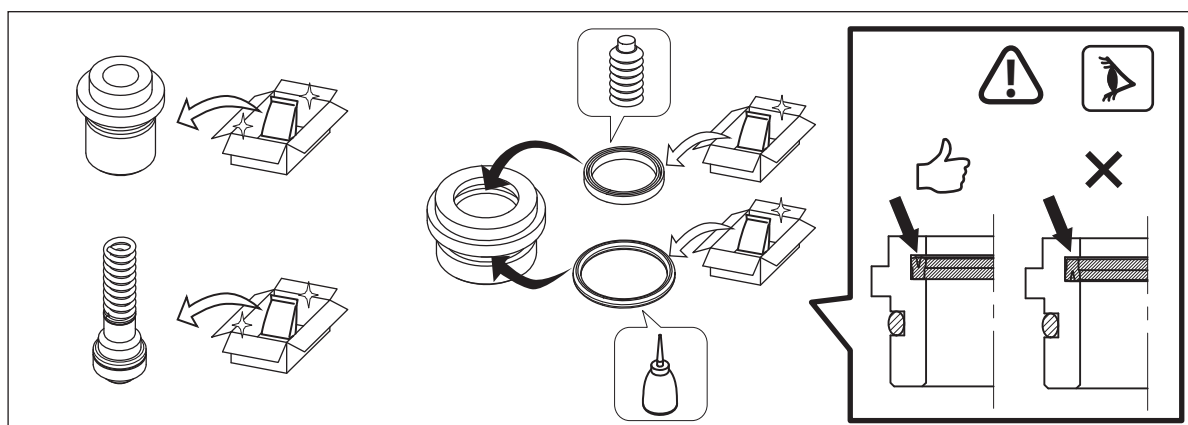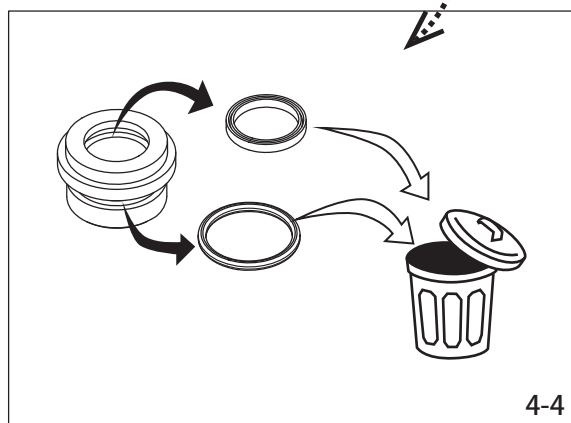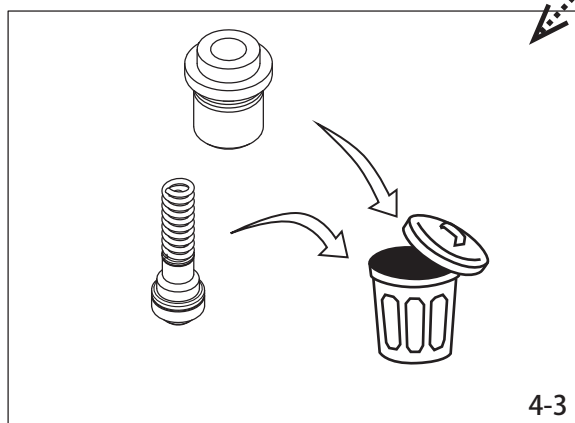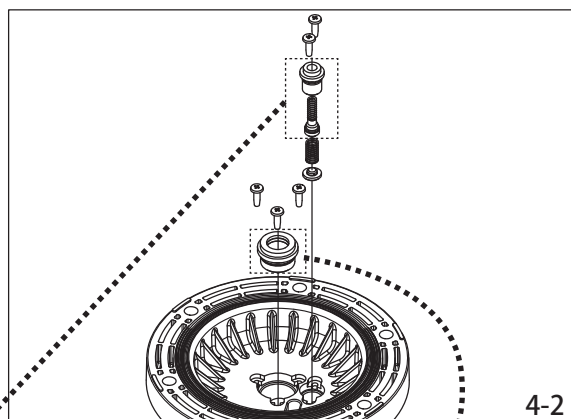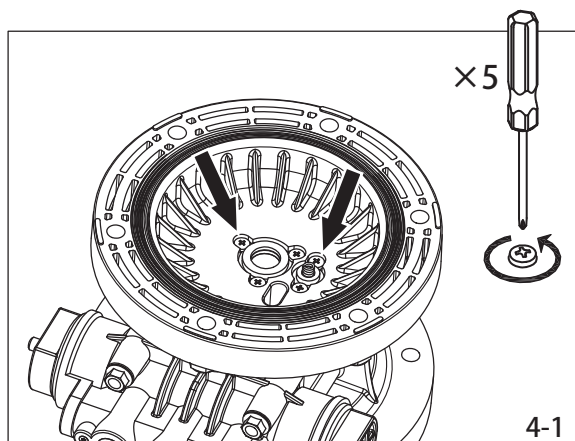

5

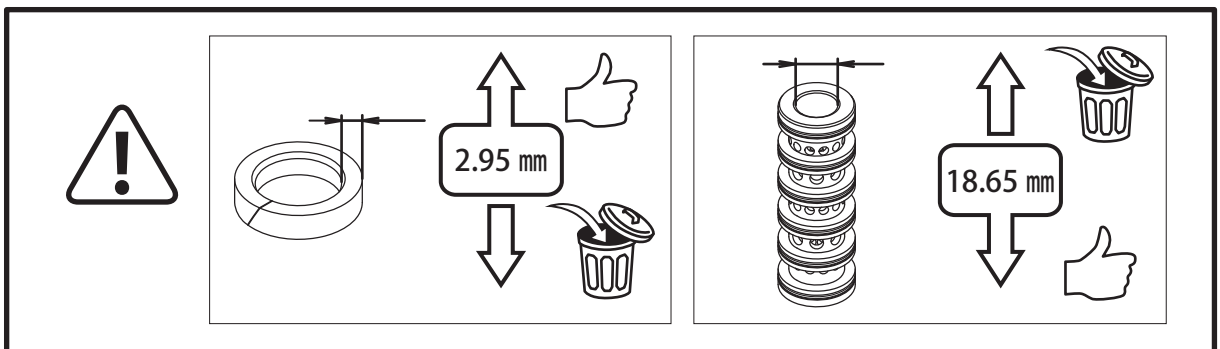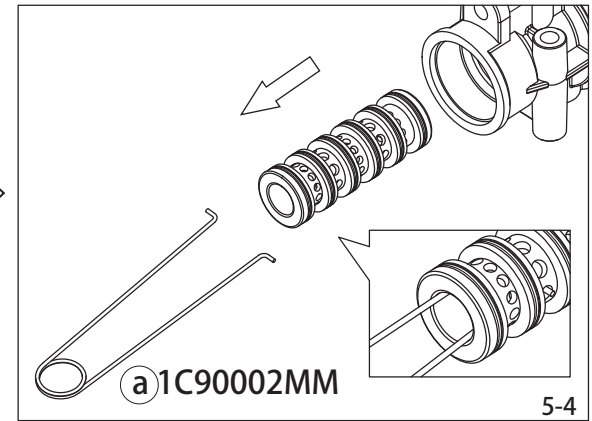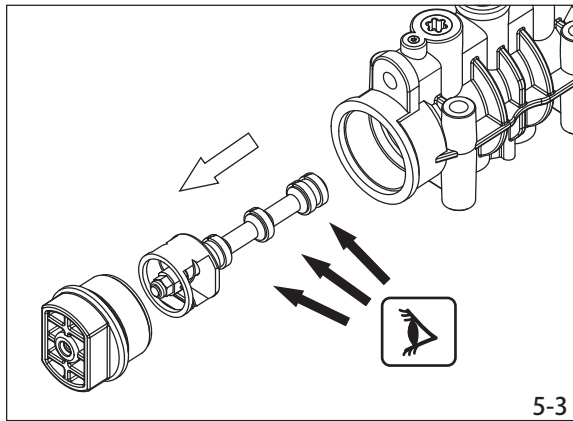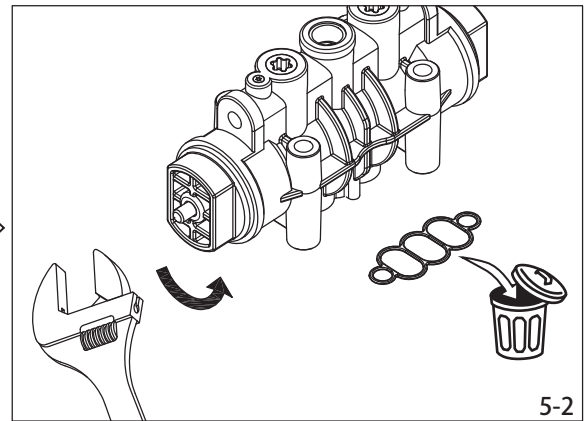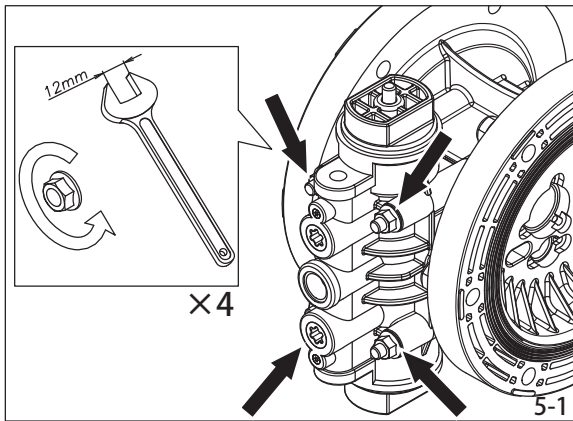

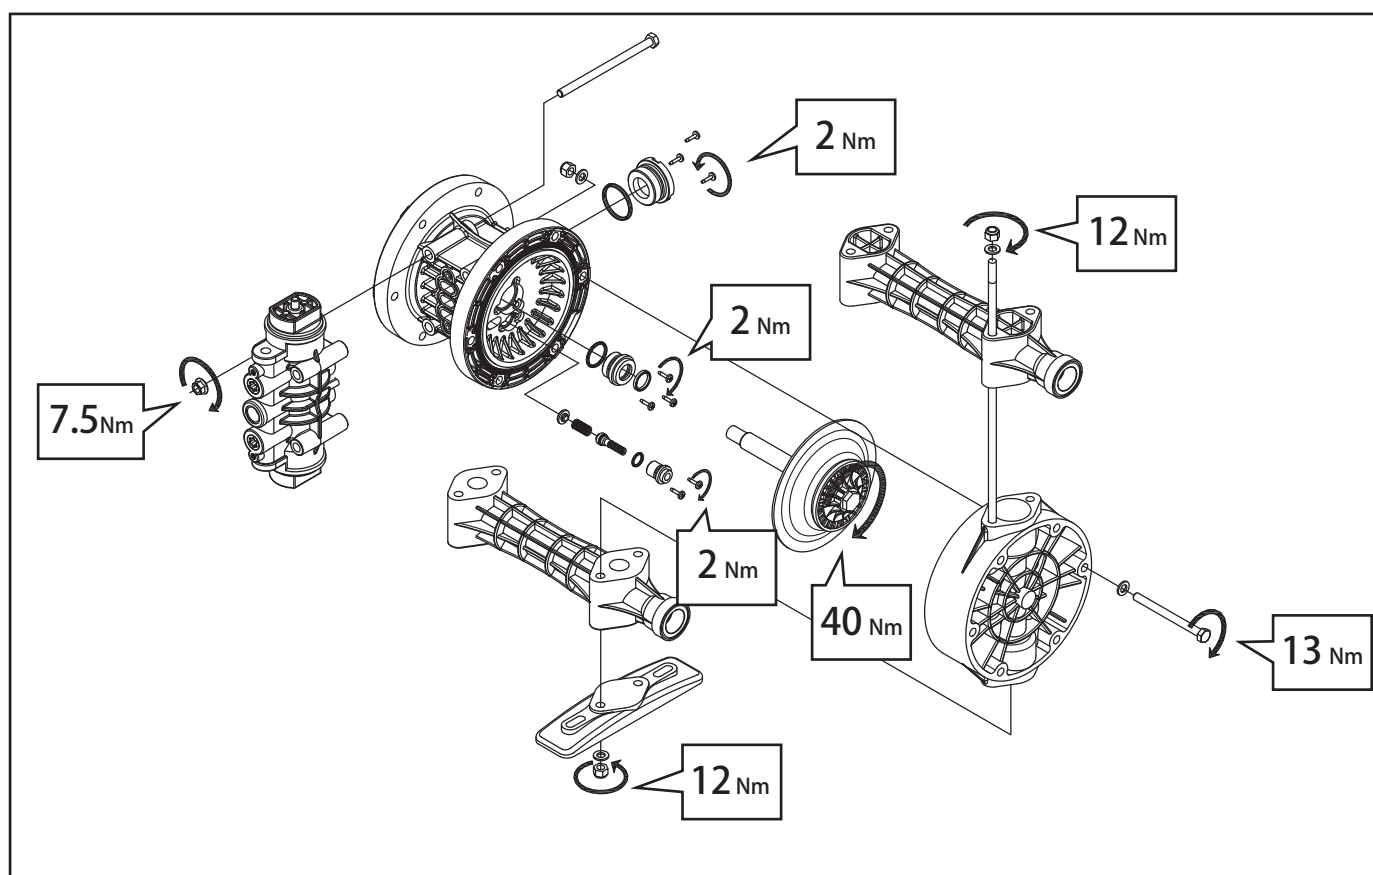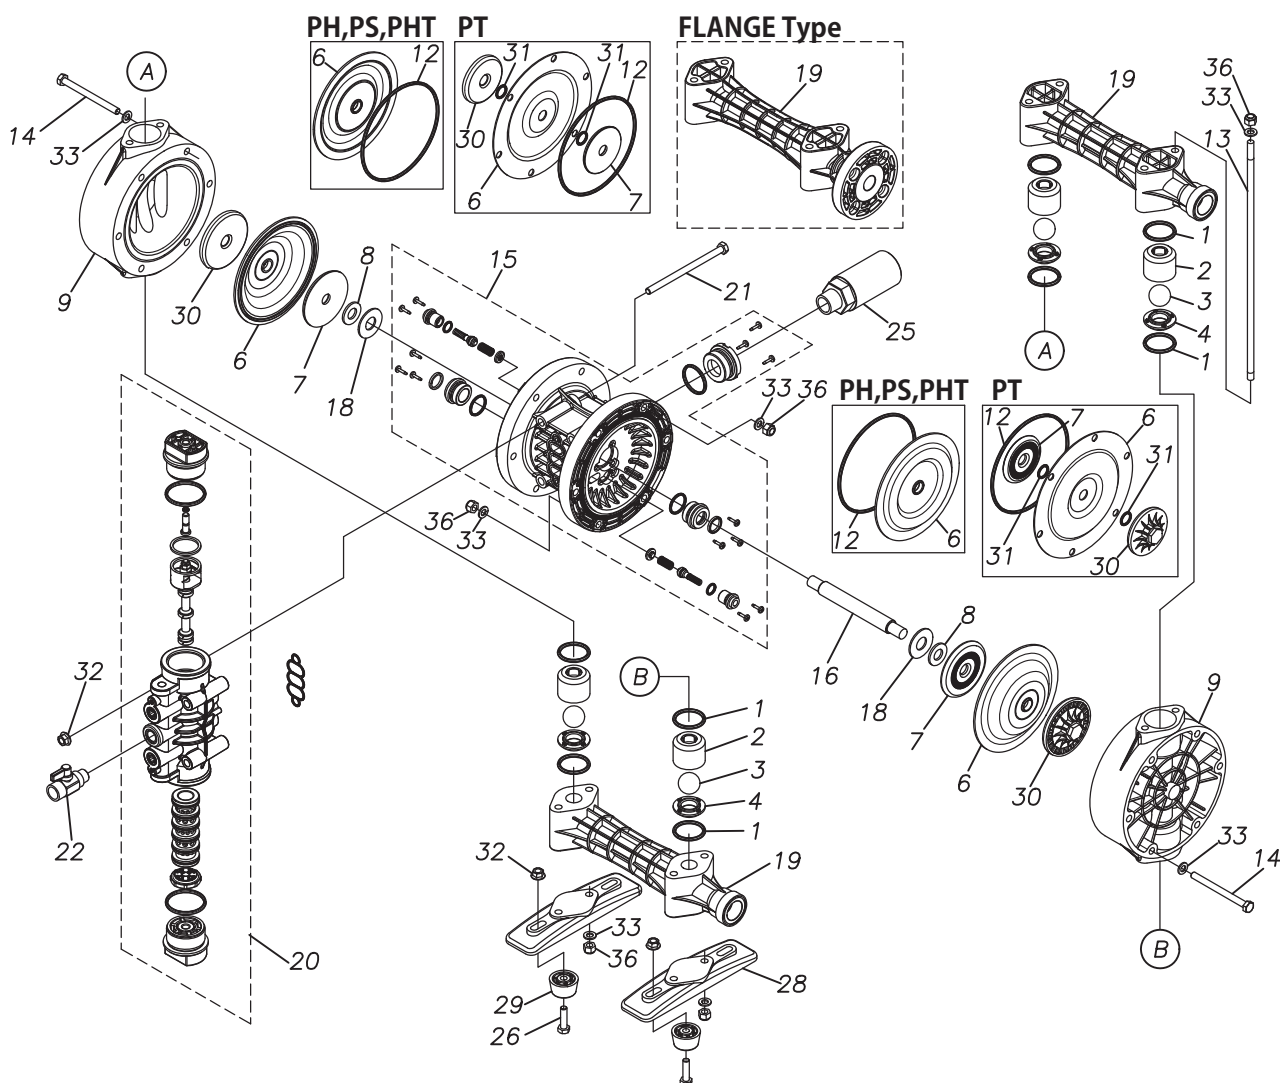

6

6-2

