PROMAG ENVIRO
Leader in Water & Waste Water Treatment Supply
CALL US TOLL FREE 1.866.449.2781
www.promagenviro.com info@promagenviro.com

Model 523 Automatic Dosing Siphon

DIRECTIONS FOR SETTING

1) Read the entire instruction book before installing.
2) Set siphon trap plumb and level. The long leg of the siphon should extend 12" above the floor line.
3) Use a gasketed fitting to connect the outlet of the siphon to the overflow pipe and discharge line.
4) Fill the siphon trap with water before initial operation.
5) Make sure all joints of the vent piping are airtight.

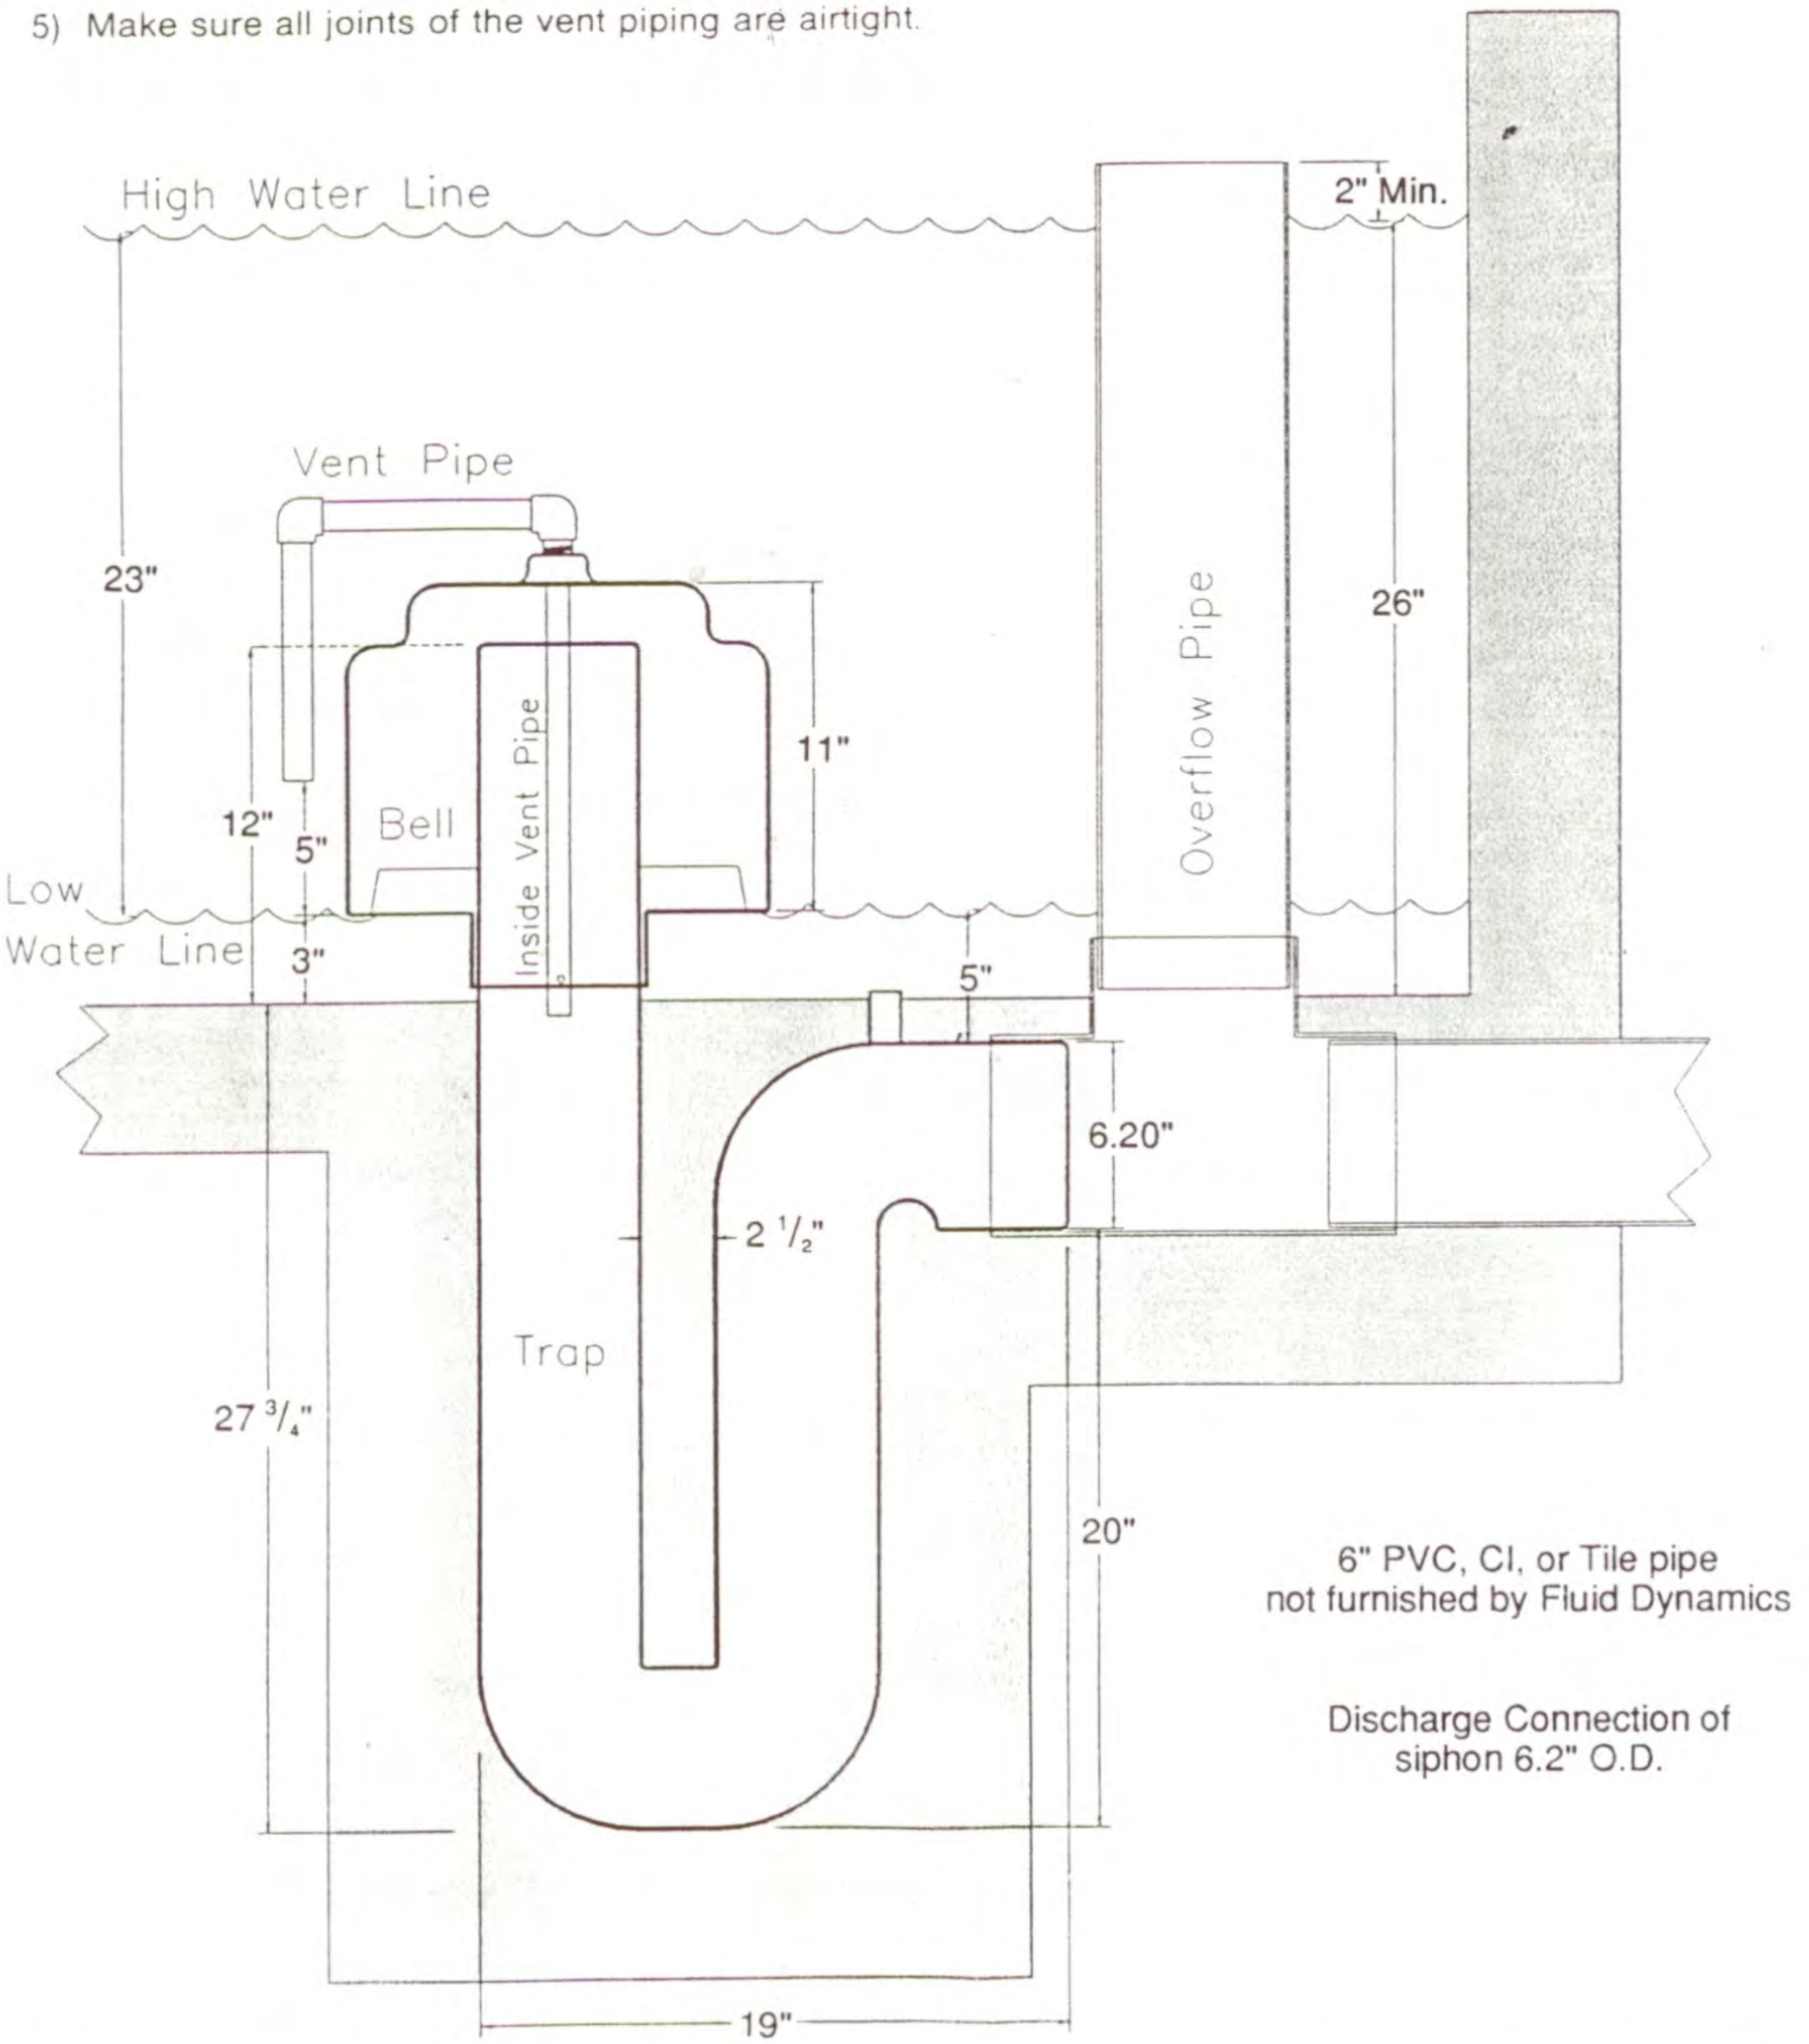

6" PVC, CI, or Tile pipe
not furnished by Fluid Dynamics

Discharge Connection of
siphon 6.2" O.D.